


INTERNAL CLEARANCE - TYPES AND NORMS

Internal clearance is the distance which the two rings of a non-installed bearing can move when they are pushed in opposite directions. A distinction is made between radial and axial clearance. Radial clearance is measured perpendicular to a bearing's central axis, while axial clearance is measured along the central axis. The distance between one final position and the other is measured.

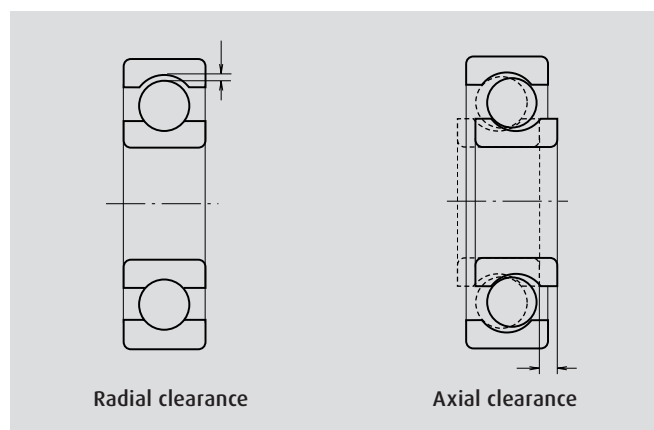

Internal clearance has a major impact on the operating performance of bearings. It affects factors such as their service life, vibration, noise level and heat generation.

MEASURED AND GEOMETRIC INTERNAL CLEARANCE

To obtain actual values, the theoretical clearance is measured by applying a defined measuring load to the bearing. This measured value is always slightly higher than the theoretical clearance – also known as the geometric clearance. The difference between the two figures corresponds to the elastic deformation caused by the measuring load.

The theoretical clearance can be calculated by subtracting the amount of elastic deformation from the measured clearance. This elastic deformation is minimal in the case of

roller bearings, where the internal clearance defined prior to installation and the theoretical clearance are the same.

Please refer to the main NSK bearing catalog for tables showing the internal clearance for specific types of bearings.

Converting radial clearance into axial clearance for tapered roller bearings

$$\text{Axial clearance } \Delta_a = \Delta_r \cot \alpha \cong \frac{1.5}{e} \Delta_r$$

Δ_r : Radial clearance

α : Contact angle

e : Constant

FACTORS AFFECTING INTERNAL CLEARANCE

Reduction in Radial Clearance due to the Fit

If the inner ring or outer ring is mounted on the shaft or in the housing with an interference fit, the radial clearance is reduced when the inner ring expands or the outer ring contracts. This reduction varies for different bearing types and sizes, and depends on the shaft or housing design. The reduction is approximately 70 to 90% of the interference. After subtracting these reductions (δ_{ie} and δ_{fi}) from the theoretical clearance (Δ_0), the play is referred to as residual clearance (Δ_r).

INTERNAL CLEARANCE - TYPES AND NORMS


Reduction in Radial Play due to Differences in Temperature between the Inner and Outer Rings

The frictional heat generated during operation is conducted along the shaft and through the housing until it reaches the outside. As housings are better at conducting heat than shafts due to their mass, the temperature of the inner ring and the

rolling elements is normally 5 to 10°C higher than that of the outer ring. If the shaft heats up or the housing is cooled down, the resulting difference in temperature between the inner and outer rings causes the radial play to decrease.

Subtracting δ_t from the residual clearance (Δ_f) gives us the effective internal clearance (Δ).

Changes in the Radial Clearance

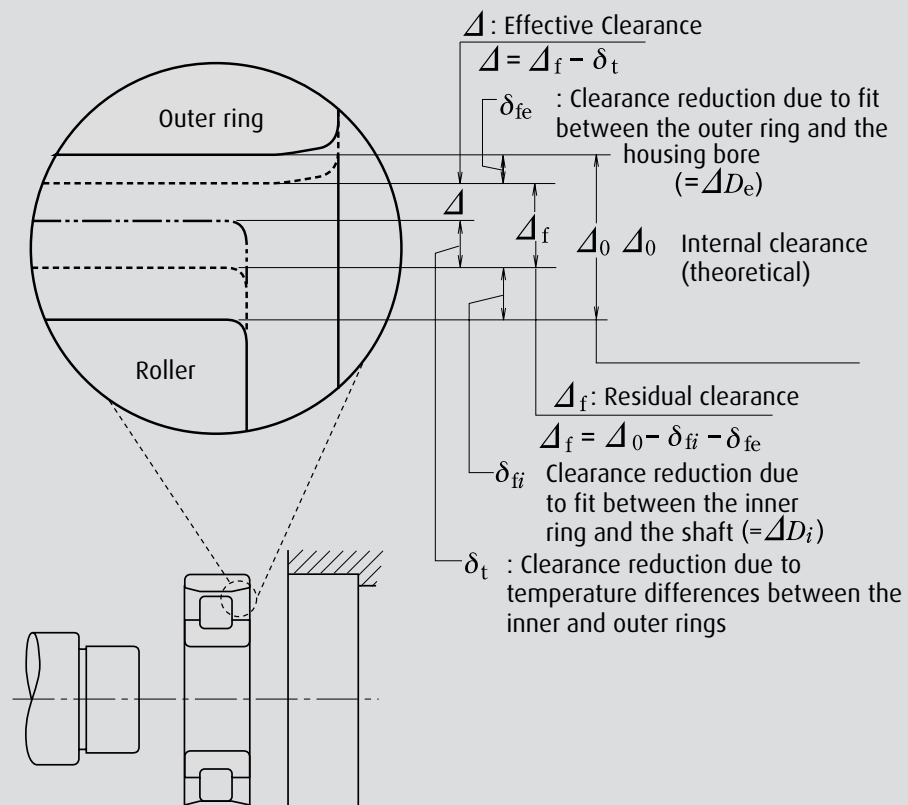

INTERNAL CLEARANCE - TYPES AND NORMS

The following equations can be used to calculate the extent of this reduction:

$$\delta_t = \alpha \Delta_t D_e$$

δ_t : Radial clearance reduction due to temperature differences between the inner and outer rings (mm)

α : Linear thermal expansion coefficient for bearing steel = $12.5 \cdot 10^{-6}$ (1/°C)

Δ_t : Difference in temperature between the inner and outer rings (°C)

D_e : Outer ring raceway diameter (mm)

For ball bearings

$$D_e \cong \frac{1}{5} (4D+d)$$

For roller bearings

$$D_e \cong \frac{1}{4} (3D+d)$$

A bearing with an effective clearance of 0 or a low positive number should be chosen. If single-row angular-contact ball bearings or tapered roller bearings are mounted as a duplex set, the effective clearance should be minimal (unless a preload is

needed). If two cylindrical roller bearings with a shoulder on one side are used opposite one another, a level of axial clearance must be selected which enables free expansion of the shaft.

Internal Clearance in Specific Applications

Operating Conditions	Examples	Internal Clearance
Severe shaft deflection	Semi-floating wheel bearings in cars	C5 or similar
Steam flow through hollow shafts or pressure bars exposed to heat	Dry end of paper machines Conveyor rollers in rolling mills	C3, C4 C3
High impact loads and vibrations, or both inner and outer rings with an interference fit	Traction motors for trains Vibrating screens Hydraulic clutches Gearboxes for tractors	C4 C3, C4 C4 C4
Loose-fitting inner and outer rings	Roll tenons for rolling mills	C2 or similar
Very quiet, vibration-free running	Small motors with special specifications	C1, C2, CM
Set play to avoid shaft deflection etc.	Main spindle of lathes	CC9, CC1

INTERNAL CLEARANCE - TYPES AND NORMS

PRELOAD – A SPECIAL TYPE OF NEGATIVE CLEARANCE

Normally, bearings retain a certain amount of internal play when they are operating. However, in some cases it is advantageous to set negative clearance to increase the bearing arrangement's rigidity. This is called preloading.

Preloads are designed for use with bearings whose play can be set during installation, e.g. angular-contact ball bearings and tapered roller bearings. Generally, two bearings are mounted in a face-to-face or back-to-back configuration to create a duplex set with a preload.

The purpose of a preload in typical applications:

- › Main shafts of machine tools and precision instruments: Holding the bearings in their exact position – both radially and axially – as well as maintaining the shaft's rotational accuracy and increasing rigidity.
- › Main shafts of machine tools, pinion shafts in car gearboxes: Increasing bearing rigidity and optimizing gear meshing.
- › Small electric motors: Reducing noise caused by axial vibration and resonance.
- › High-speed or high-acceleration applications with angular-contact or axial ball bearings: Preventing slippage between the rolling elements and the raceways caused by gyratory moments
- › Axial ball bearings and self-aligning spherical roller thrust bearings mounted on a horizontal shaft: Keeping the rolling elements in the correct position with the bearing rings.


TYPES OF PRELOAD

1a) Position Preload

A position preload is achieved by fixing two axially opposed bearings in such a way that a preload is imposed on them. Once they have been fixed in place, their position remains unchanged during operation.


In practice, three methods are normally used to obtain a position preload:

- › Installing a duplex bearing set with previously adjusted stand-out dimensions and axial clearance.
- › Using a spacer or shim of the correct size to obtain the required spacing and preload.
- › Utilizing screws or nuts to set the axial preload. In this case, the starting torque should be measured to verify the proper preload.

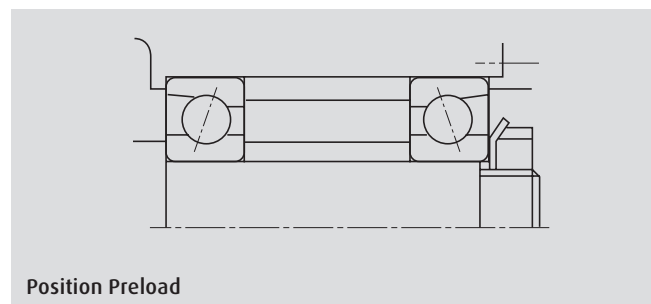


1b) Position Preload and Rigidity

When the inner rings of bearings A and B are fixed axially, the space measuring $2 \delta_{a0}$ is eliminated. A preload of F_{a0} is imposed on each bearing.

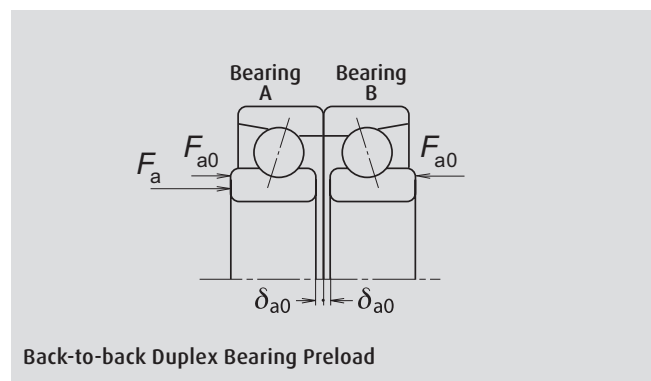


INTERNAL CLEARANCE - TYPES AND NORMS

Bearing rigidity - i.e. the relationship between load and axial displacement - with a given axial load F_a imposed on a duplex set.

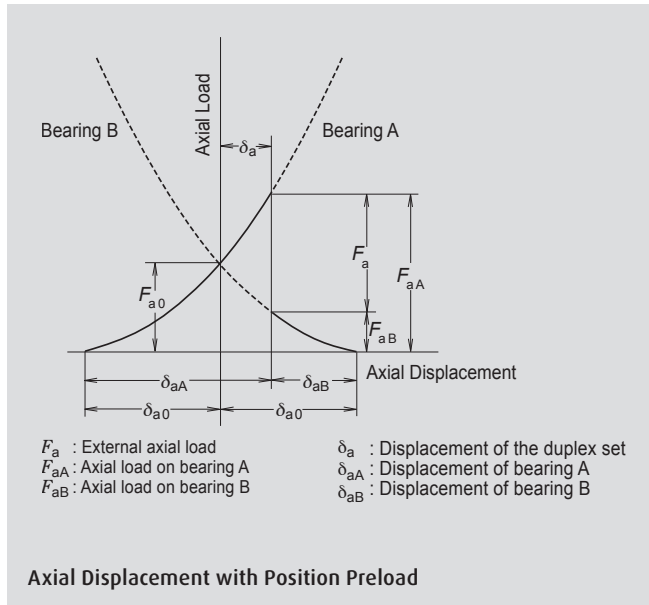


2a) Constant-pressure Preload

A constant-pressure preload is achieved using a coil or leaf spring. Even if the relative position of the bearings changes during operation, the size of the preload remains relatively constant.

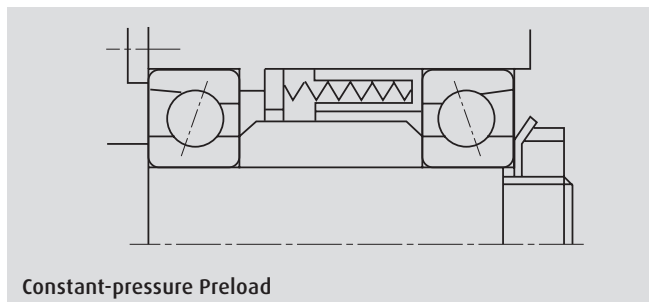

2b) Constant-pressure Preload and Rigidity

The diagram shows the rigidity of duplex bearings under a constant-pressure preload. The deflection curve of the spring is nearly parallel to the horizontal axis because the rigidity of the springs is lower than that of the bearing. As a result, the rigidity under a constant-pressure preload is approximately equal to that for a single bearing with a preload of F_{a0} applied to it.

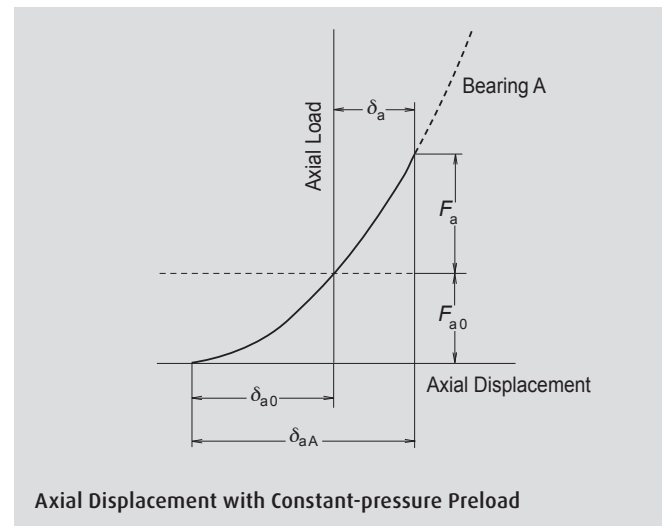

COMPARISON OF BEARING RIGIDITY AND PRELOADING METHODS

Position preload and constant-pressure preload can be compared as follows:

- (1) When both preloads are equal, the position preload provides greater bearing rigidity. In other words, the deflection due to external loads is less for bearings with a position preload.
- (2) Constant-pressure preloads are more suitable for high-speed applications, to prevent axial vibration and for use with thrust bearings on horizontal shafts.

INTERNAL CLEARANCE - TYPES AND NORMS

- (3) When a position preload is used, the preload varies depending on the following factors:
- › Variation in the axial expansion due to temperature differences between the shaft and the housing
 - › Variation in radial expansion due to temperature differences between the inner and outer rings
 - › Deflection due to load
- (4) When using a constant-pressure preload, variation is minimal because the effects of shaft expansion and contraction are negligible.

Amount of Preload


If the preload is larger than necessary, it can result in unwanted heat generation, increased torque and a shorter service life. The amount of preload should be carefully calculated, taking the operating conditions and the purpose of the preload into account. In extreme cases, the bearing may last for just a few hours.

(1) Preloading duplex angular-contact ball bearings

As a general rule, an extra light or light preload should be selected for grinding spindles and the main shafts of machining centers. A medium preload should be adopted for the main shafts of lathes requiring rigidity. When speeds result in a value of $D_{pw} \cdot n$ (d_m value) higher than 500,000 the preload should be very carefully considered and selected.

(2) Preloading axial ball bearings

When the balls in axial ball bearings rotate at relatively high speeds, slippage may occur due to gyratory moments acting on the balls. The larger of the two values obtained from the equations should be adopted as the minimum axial load in order to prevent this kind of slippage.

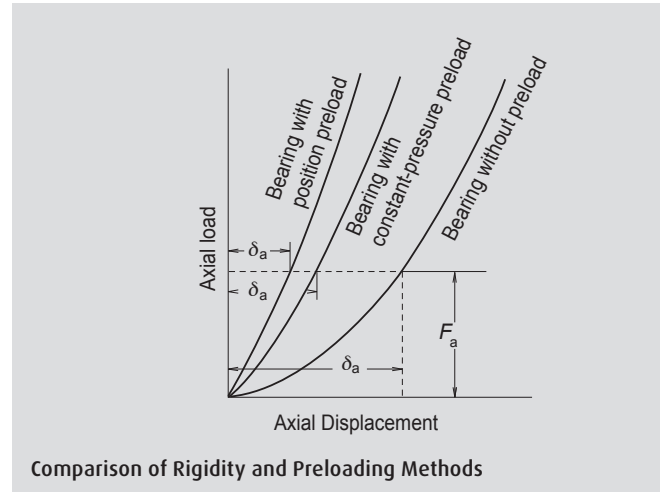

$$F_{a \min} = \frac{C_{0a}}{100} \cdot \left(\frac{n}{N_{\max}} \right)^2$$

$$F_{a \min} = \frac{C_{0a}}{1000}$$

$F_{a \min}$: Minimum axial load (N), {kgf}

n : Speed (min^{-1})

C_{0a} : Basic static load rating (N), {kgf}

N_{\max} : Limiting speed (oil lubrication) (min^{-1})

(3) Preloading self-aligning spherical roller thrust bearings

When self-aligning spherical roller thrust bearings are used, damage such as broken rings may occur due to slippage between the rollers and the outer-ring raceway. The minimum axial load necessary to prevent such slippage ($F_{a \min}$) can be calculated using the following equation:

$$F_{a \min} = \frac{C_{0a}}{1000}$$